


Installing a Seal Tight Damper with a HY-C Chimney Cover



Step 1

Unscrew a corner screw as far as possible without removing it. Bend the corner band flat as shown.

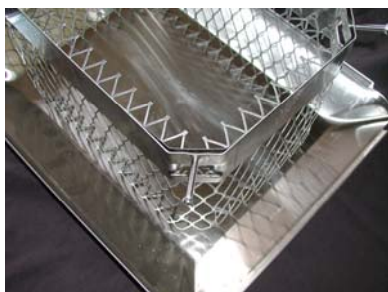

Step 2

Repeat for the other three corners.




Step 3

Turn the expanded metal ridge upward. This can be done by hand or you can use a pliers or hand seamer.



Step 4

The expanded mesh will be difficult to get completely vertical, but you only have to bend the mesh enough to allow the damper to open and close properly.

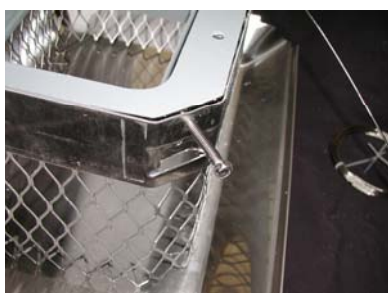

Step 5

Insert the damper into the cap frame. It will be a tight fit. The bottom of the damper frame should end up being flush with the bottom of the band on the cap.



Step 6

Tighten the cap onto the damper. Make sure the damper operates freely within the cap. The damper cap combo can now be secured to the top of the flue.